Ritter® by Midmark

Installation Instructions

9A281001 & 002 Welch Allyn Light Bracket Kit

KIT COMPONENTS

Part Number	Description	Qty.
9A28100X	Welch Allyn Bracket Kit (Model 100, 300, and 304)	1
• 050-4820-40	Bracket, Light	1
• 040-0010-75	Screw, Light Mtg. 10-24 x 3/8"	2
• 040-0010-44	Screw, Brkt. Mtg.10-24 x 1"	4
• 029-2533-00	Backer Board Assy.	1
• 003-1099-00	Installation Instructions	1

REQUIRED TOOLS

Phillips Screwdriver
Power Hand Drill
Safety Glasses
7/32" Drill Bit
Measuring Tape

IMPORTANT INSTRUCTIONS

Provides a means to mount a Welch Allyn Light (48700 or 48800) on Models 100, 300, and 304 Exam Tables.

NOTE

Holes are pre drilled at factory on tables that have been ordered with the 9A281001 Light Bracket. Refer only to INSTALLATION (1), (4), and (5).

EQUIPMENT ALERT

Midmark supplies two #10-24 x 3/8" screws, for mounting Welch Allyn light to Midmark table bracket. *Do not discard them*.

NOTE

For light mounting procedures refer to information supplied with Welch Allyn light package.

INSTALLATION (1)

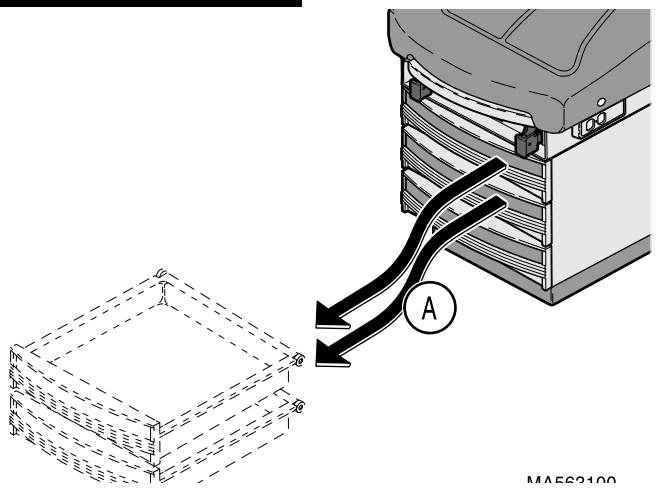

WARNING

Unplug table before performing any work. Failure to comply could result in personal injury.

A. Remove two top drawers on foot end of table.

INSTALLATION (2)

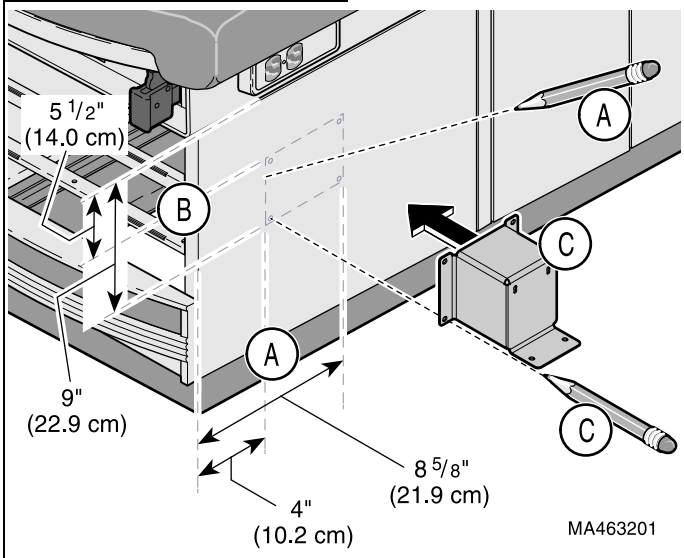

A. Mark reference lines 4" (10.2 cm) and 8 5/8" (21.9 cm) from foot end of table on patient's left front support panel.

B. Measure down 5 1/2" (14.0 cm) and 9" (22.9 cm) from bottom of upper support bracket and mark reference lines.

C. Position edge of bracket on reference lines and mark ***center*** of mounting hole.

© Midmark Corporation - 2000

INSTALLATION (3)

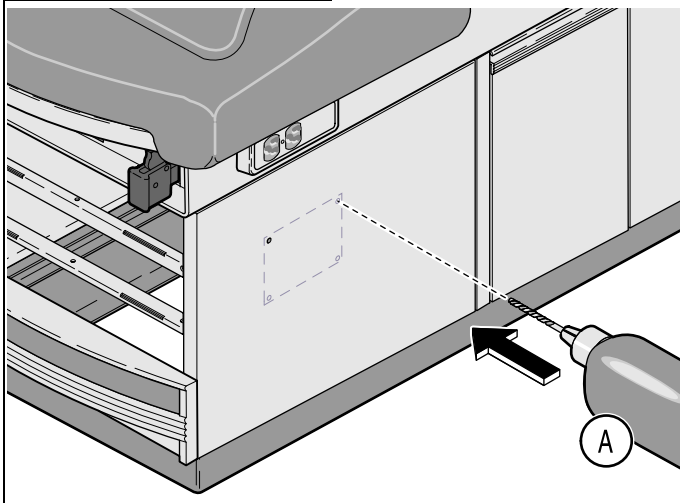

MA463302

A. Drill four 7/32" holes at center-line location marks.

INSTALLATION (4)

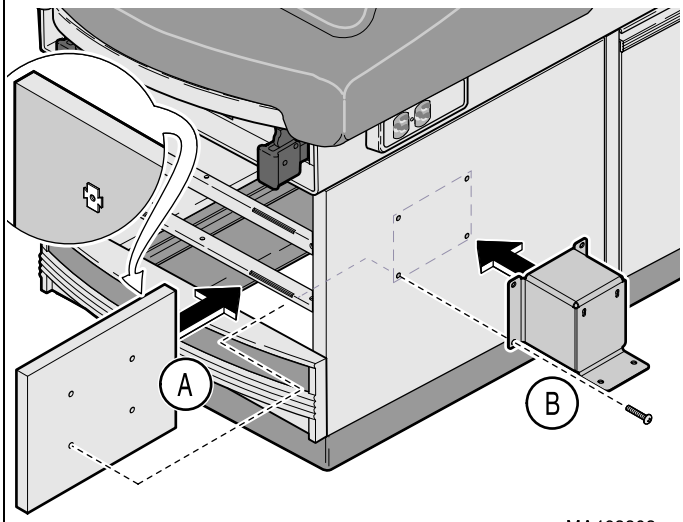

MA463303

EQUIPMENT ALERT

To prevent T-nuts from pulling out, position Backer Board so heads of T-nuts are positioned toward inside of table cavity.

A. Place Backer Board Assembly in position, aligning the mounting holes with holes previously drilled.

NOTE

Position light bracket so light support lip on bracket is down.

B. While supporting Backer Assembly mount Light Bracket using four 10-24 x 1" screws.

INSTALLATION (5)

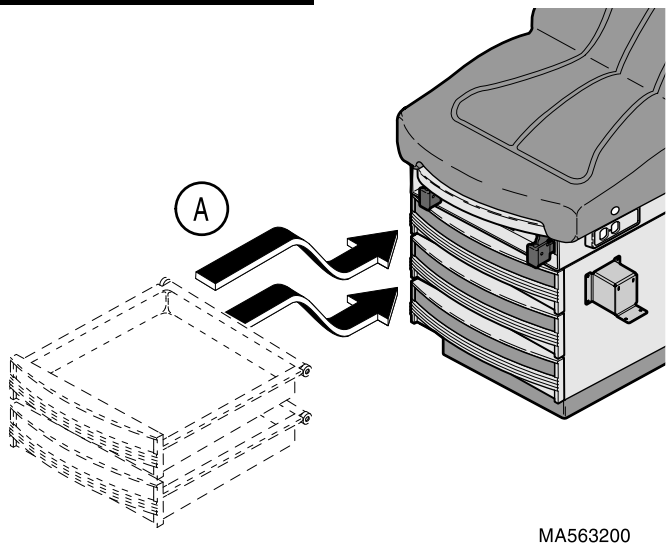

MA563200

A. Install two top drawers and plug table into wall outlet.

NOTE

If the Welch Allyn Light is not being mounted at this time, tape the two #10-24 x 3/8" screw to the bracket to prevent loss.

MIDMARK®
Midmark Corporation, Versailles, Ohio 45380 U.S.A.
(937) 526-3662 FAX (937) 526-5542

© Midmark Corporation - 2000